

DuraSystem®

Montageanleitung	Urinal-Element, Standard
Mounting instructions	Urinal frame, standard
Notice de montage	Bâti-support pour urinoir, standard
Montagehandleiding	Urinoir-element, standaard
Instrucciones de montaje	Urinario, estándar
Istruzioni di montaggio	Modulo di installazione per orinatoio, standard
Instruções de montagem	Elemento do urinol, padrão
Monteringsvejledning	Urinal-element, standard
Asennusohje	Urinaalielementti, vakio
Monteringsanvisning	Urinalelement, standard
Monteringsanvisning	Urinoarelement, standard
Paigaldusjuhend	Pissuaarielement, standardne
Instrukcja montażu	Element pisuaru, standard
Инструкция по монтажу	Монтажный элемент для писсуара, стандартный
Montážní návod	Urínalový prvek, standardní
Návod na montáž	Rám pisoáru, štandardný
Szerelési útmutató	Piszoár-szerelőállvány, alapkivitel
Upute za montažu	Pisoar element, standardni
Instrucțiuni de instalare	Element de pisoar, standard
Navodila za montažo	Element pisoarja, standarden
Ръководство за монтаж	Елемент за писоар, стандартен
Montāžas instrukcija	Pisuāra elements, standarta
Montavimo instrukcija	Pisuario elementas, standartinis
Montaj kılavuzu	Pisuar sistemi, standart
安装说明	小便器元件，标准
설치 설명서	소변기 부품, 표준
取り付け説明書	ウринаル用フレーム、標準タイプ
دليل التركيب	مرحاض، معياري

	Wichtige Hinweise	4
	Important information	5
	Remarques importantes	6
	Belangrijke aanwijzingen	7
	Información importante	8
	Indicazioni importanti	9
	Indicações importantes	10
	Vigtige henvisninger	11
	Tärkeitä ohjeita	12
	Viktig informasjon	13
	Viktig information	14
	Olulised nõuanded	15
	Ważne informacje	16
	Важные замечания	17
	Dôležité pokyny	18
	Dôležité upozornenia	19
	Fontos tudnivalók	20
	Važne napomene	21
	Indicații importante	22
	Pomembni napotki	23
	Важни указания	24
	Svarīgi norādījumi	25
	Svarbūs nurodymai	26
	Önemli bilgiler	27
	重要说明	28
	주의 사항	29
	重要注意事項	30
	إرشادات هامة	31

	Montage, Installation, Montage, Montage, Montaje, Montaggio, Montagem, Montering, Asennus, Montering, Montering, Paigaldus, Montaż, Монтаж, Montáž, Montáž, Szerelés, Montaža, Instalarea, Montaža, Монтаж, Montáža, Montavimas, Montaj, 安装, 설치, 設置, التركيب	32
---	--	----



Wichtige Hinweise

Zur Montageanleitung

Die Montageanleitung ist Bestandteil des Duravit Produkts und muss vor der Montage sorgfältig gelesen werden.

Zielgruppe und Qualifikation

Das Urinal-Element darf nur durch ausgebildete Sanitärinstallateure montiert werden. Die Elektroinstallation darf nur von ausgebildeten Elektroinstallateuren durchgeführt werden.

Erklärung der Symbole



Verweis auf **Montagehinweis** in diesem Kapitel



Verweis auf weitere **Anleitung**



Keine Wasserinstallation

> Handlung erforderlich

Sicherheitshinweise

Lebensgefahr durch Stromschlag

Der Kontakt mit Strom führt zu elektrischem Schlag.

- > Elektroinstallation gemäß nationaler, europäischer und internationaler Richtlinien und Normen durchführen.

Produkt- und/oder Sachschäden

Der Verstoß gegen örtliche sowie länderspezifische Vorschriften und Normen kann Schäden am Produkt und/oder Sachschäden verursachen.

- > Installationsvorschriften örtlicher Versorgungsunternehmen sowie länderspezifische Normen uneingeschränkt einhalten.

Vor der Montage

Das Urinal-Element ist für die Montage von drei unterschiedlichen Urinal-Typen geeignet:

- Wasserlose Urinale
- Urinale mit Aufputzdruckspüler
- Urinale mit integrierter Sensorsteuerung

Der Wasseranschluss des Urinal-Elements muss vor der Montage für den jeweiligen Urinal-Typ umgebaut werden.

- > Tragfähigkeit der Wand prüfen.
- > Vorinstallationsdatenblätter beachten. Diese stehen im Internet unter www.pro.duravit.com zum Download bereit.

Montagehinweise

9 Anschlussmaße Wasseranschluss beachten

Der Wasseranschluss kann nachträglich nicht mehr zur Seite verschoben werden.

- > Wasseranschluss laut technischer Zeichnung der Keramik festlegen.
- > X-Maß dem technischen Datenblatt des Urinals entnehmen.

21 + 26 + 34 Befestigungs- und Anschlussmaße beachten

- > Wasser- und Abwasseranschlüsse sowie Befestigungen laut technischer Zeichnung der Keramik einstellen.

35 Wasser und Abwasser anschließen

Die Anschlüsse für Wasser und Abwasser müssen an der Hauswasserinstallation angeschlossen werden.

- > Installationsvorschriften örtlicher Versorgungsunternehmen sowie länderspezifische Normen uneingeschränkt einhalten.

36 Stromanschluss (optional)

Für Urinale mit integrierter Sensorsteuerung wird ein Stromanschluss benötigt (Art.-Nr. 005004 00 00).

- > Stromanschluss laut technischen Datenblatt des Urinals legen und danach beplanken.

38 Urinal-Befestigungsset wählen

Das mitgelieferte Urinal-Befestigungsset passt nicht für alle Urinale.

- > Befestigungshinweise der Urinal-Keramik beachten.



Important information

Mounting instructions information

The mounting instructions come as part of the Duravit product and must be read carefully prior to installation.

Target readership and qualifications

The urinal frame may only be installed by a qualified plumber. The electrical installation should only be carried out by qualified electricians.

Explanation of the symbols



Link to the **mounting instructions** in this section



Link to other **instructions**



No water installation

> Action required

Safety instructions

Risk of fatal electric shock

Contact with electricity can lead to an electric shock.

- > Carry out the electrical installation in accordance with the national, European and international directives and standards.

Product and/or property damage

The breach of local and country-specific regulations and standards can cause damage to the product and/or property damage.

- > Observe the local installation regulations and any country-specific standards at all times.

Prior to the installation

The urinal frame is suitable for mounting three different types of urinals:

- Waterless urinals
- Urinals with an exposed flushing valve
- Urinals with an integrated sensor control system

The water connection of the urinal frame must be modified for the respective urinal type prior to the installation.

- > Check the load-bearing capacity of the wall.
- > Please read the pre-installation data sheets. These are available to download on the Internet at www.pro.duravit.com.

Mounting instructions

9 Observing the water connection dimensions

The water connection can no longer be moved to the side afterwards.

- > Set the water connection according to the ceramic technical drawing.
- > Take the X-dimension from the urinal technical drawing.

21 + 26 + 34 Observing the fixing and connection dimensions

- > Set the water and waste water connections and fixings according to the ceramic technical drawing.

35 Connecting the water and waste water

The connections for the water and waste water must be connected to the domestic water installation.

- > Observe the local installation regulations and any country-specific standards at all times.

36 Power connection (optional)




A power connection is required for urinals with an integrated sensor control system (Art. no. 005004 00 00).



- > Install the power connection according to the urinal data sheet and then fit the panelling.











38 Selecting a urinal fixing set







The urinal fixing set supplied is not suitable for all urinals.





- > Observe the fixing instructions for the urinal ceramic.

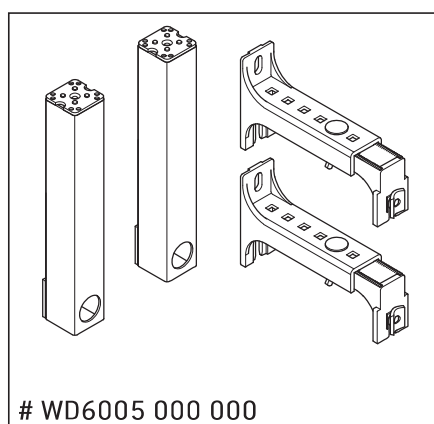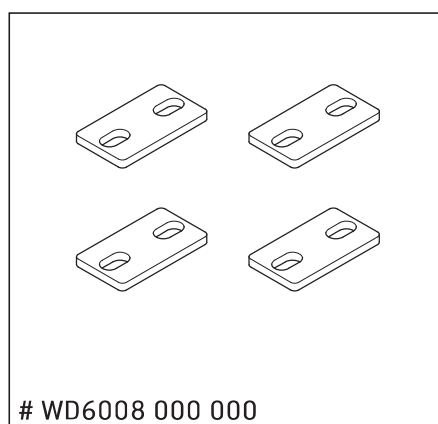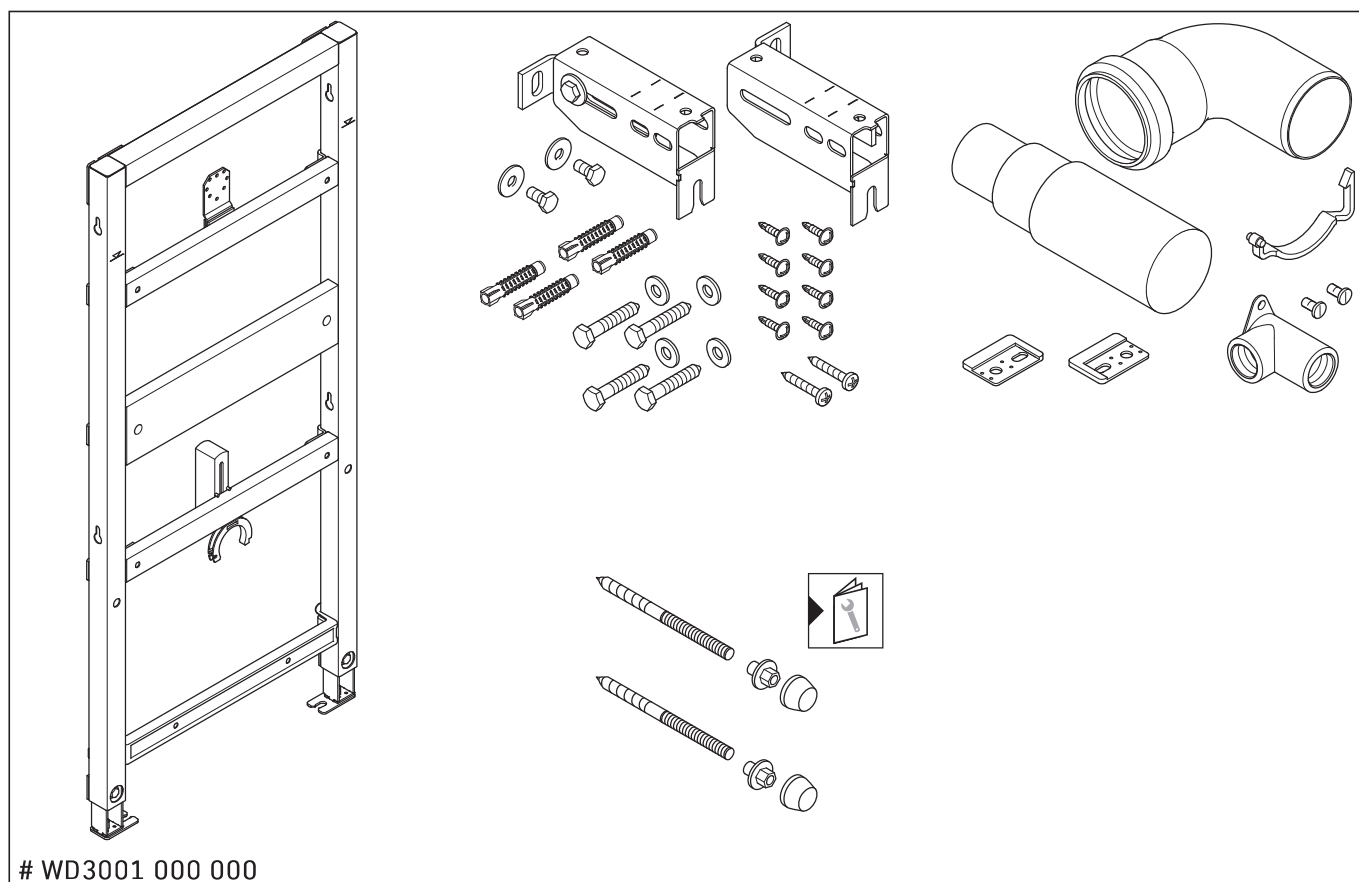

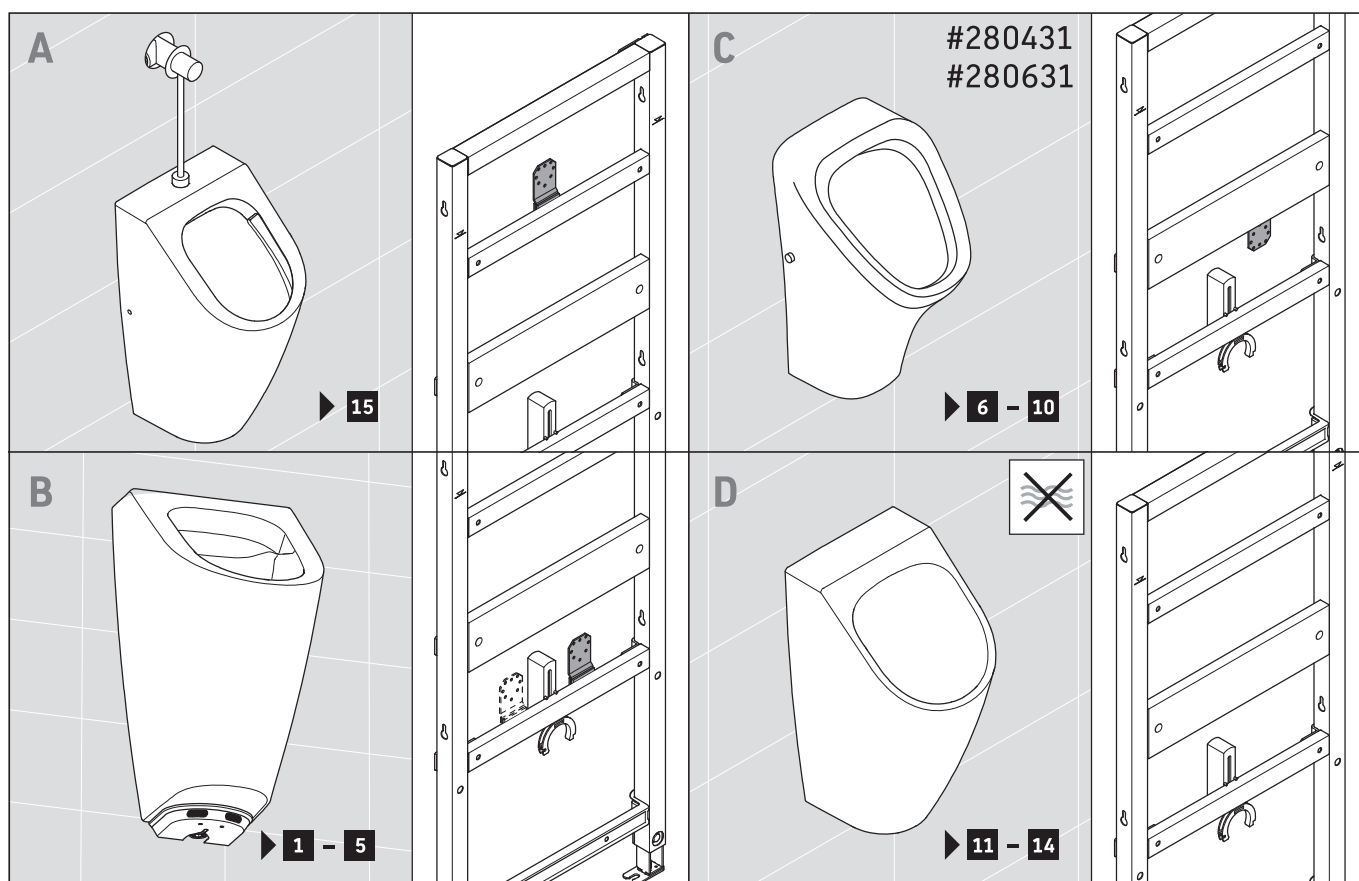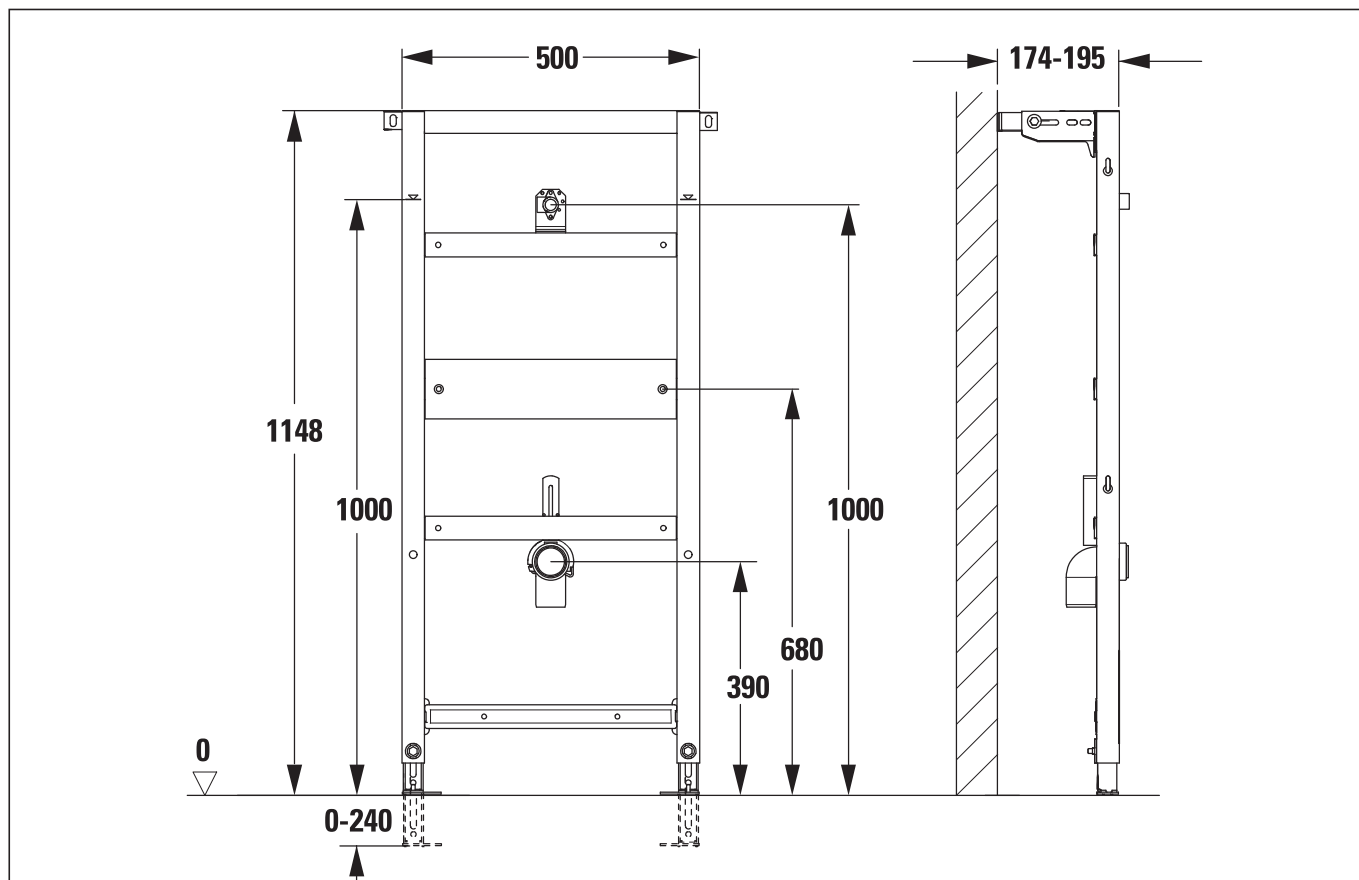

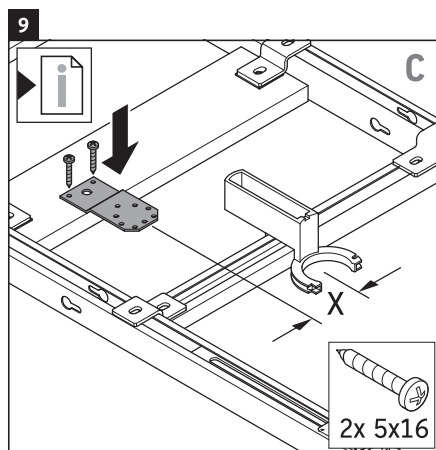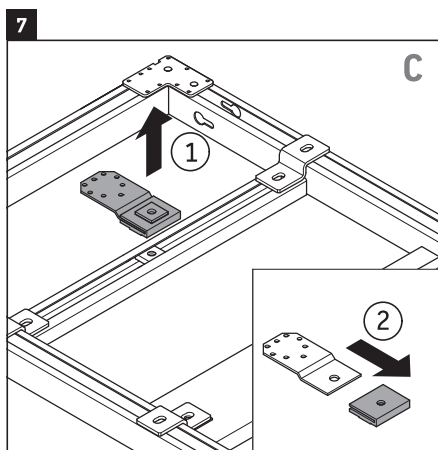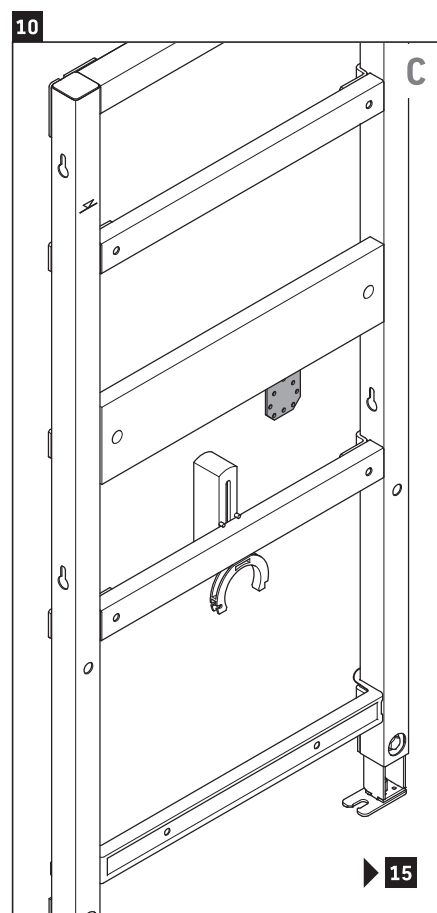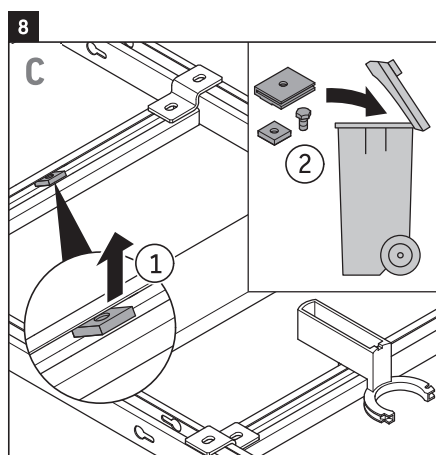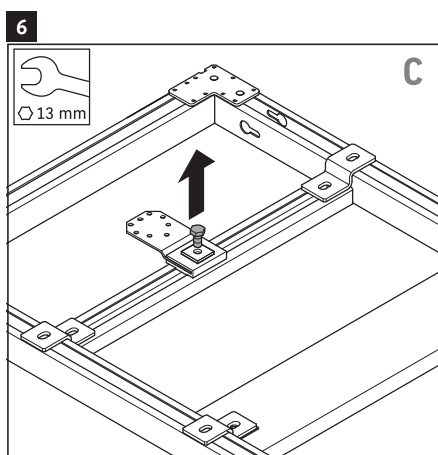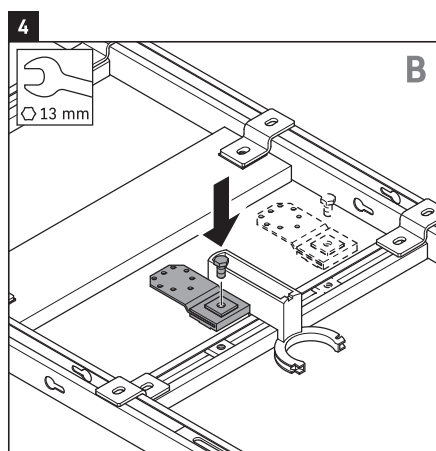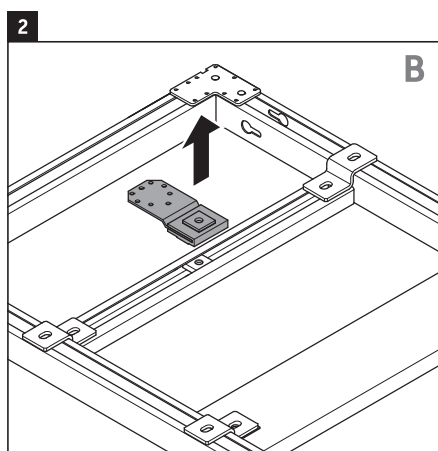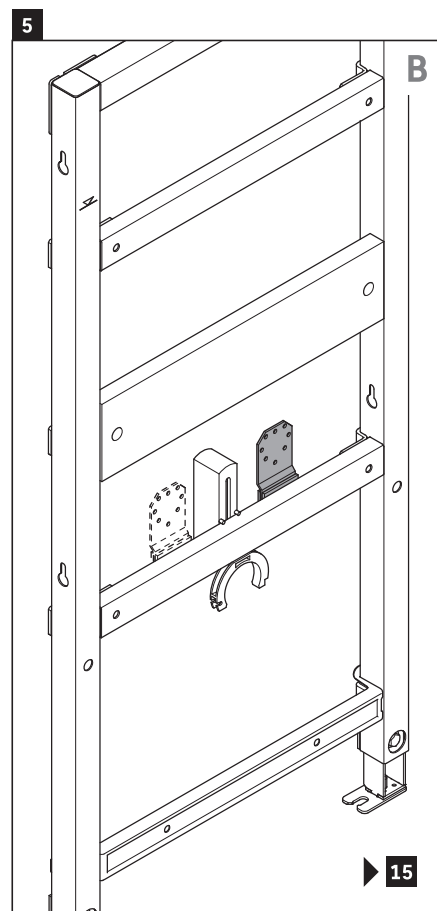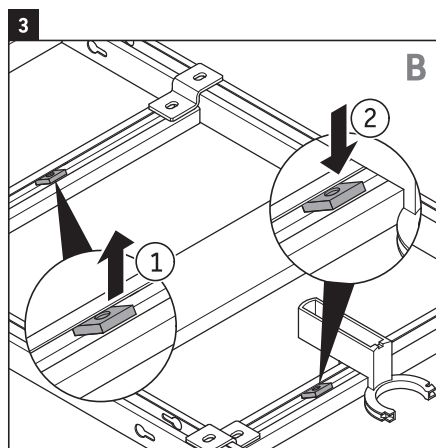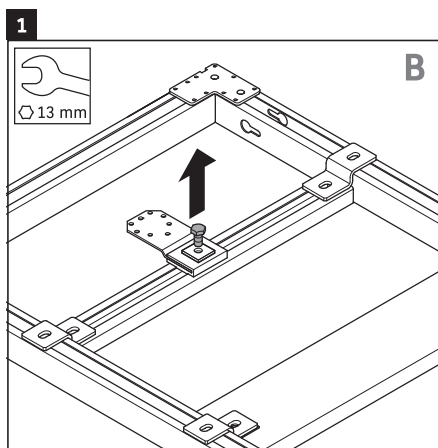


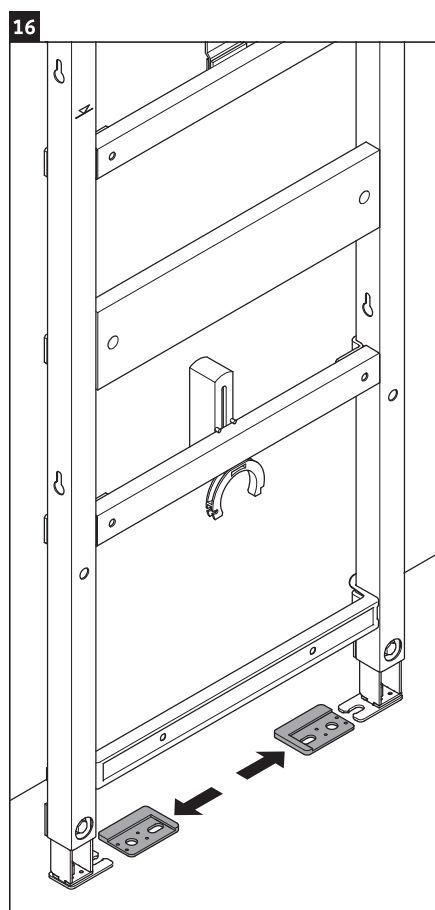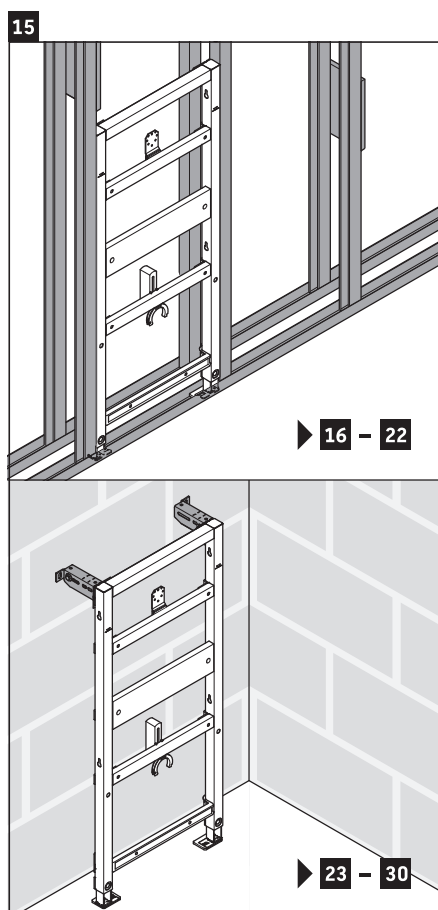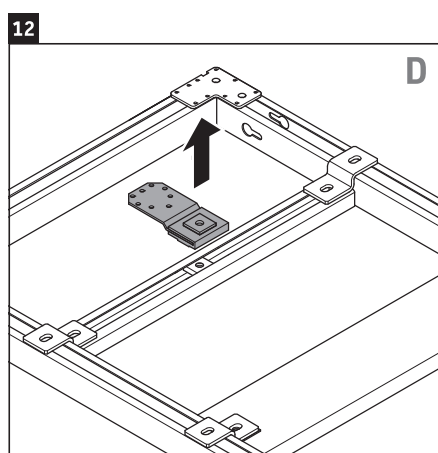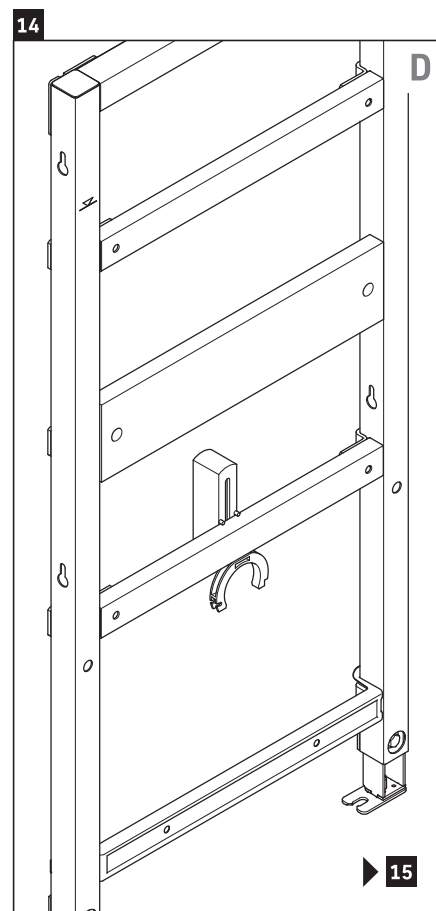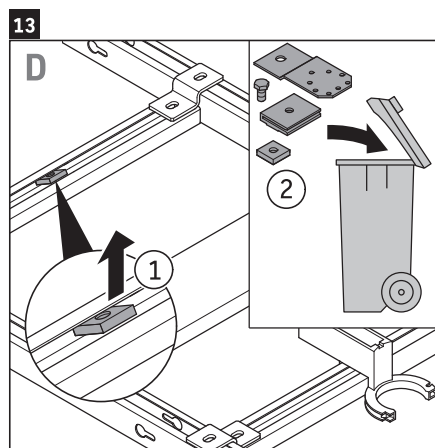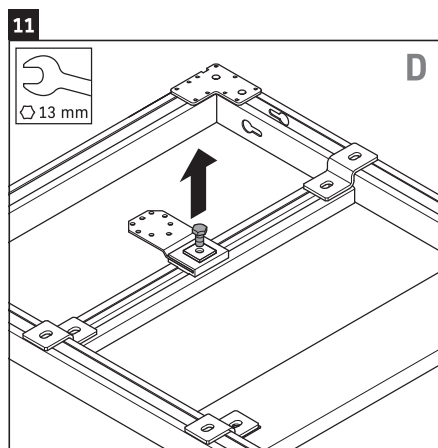

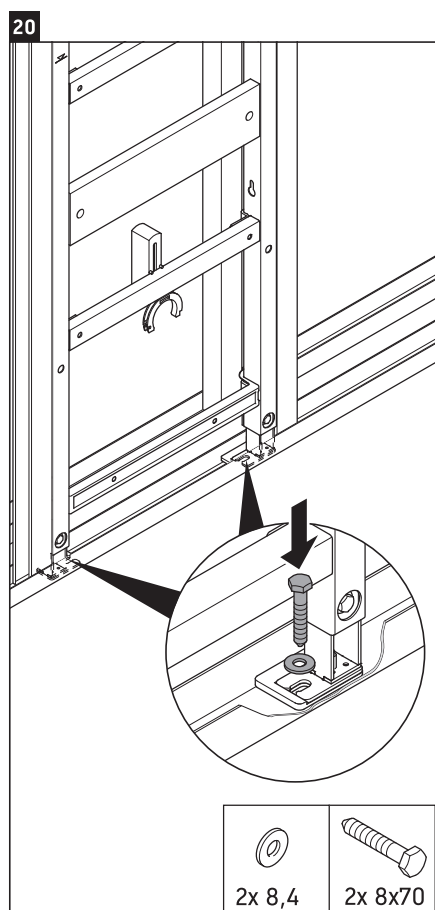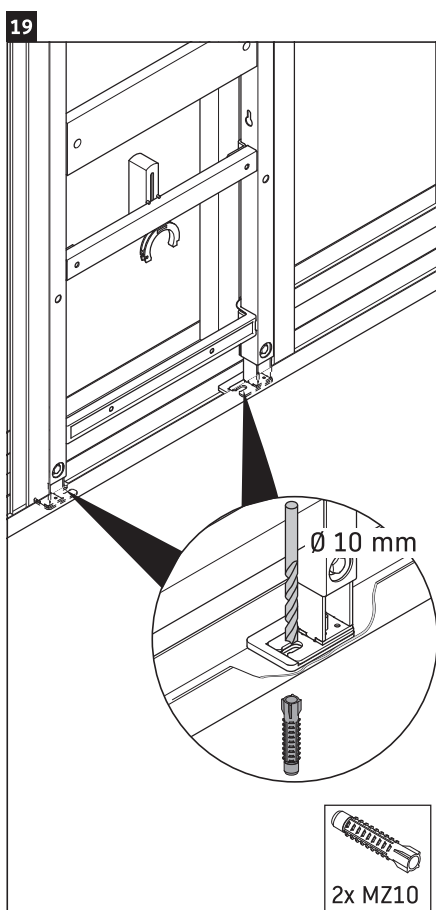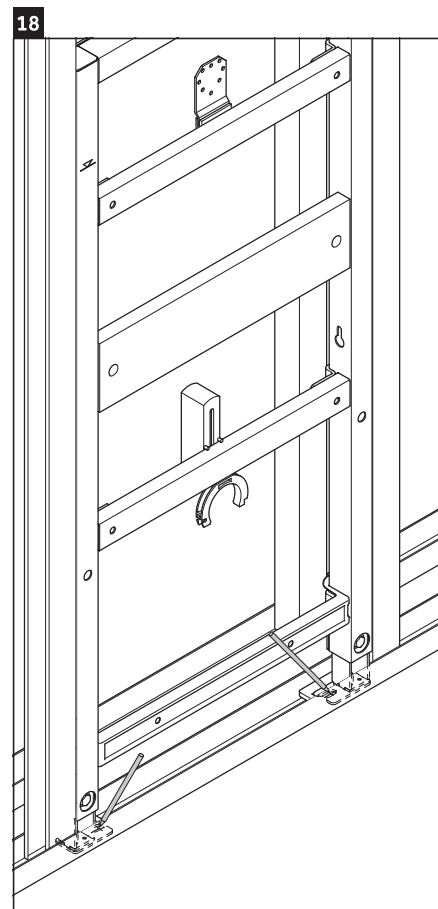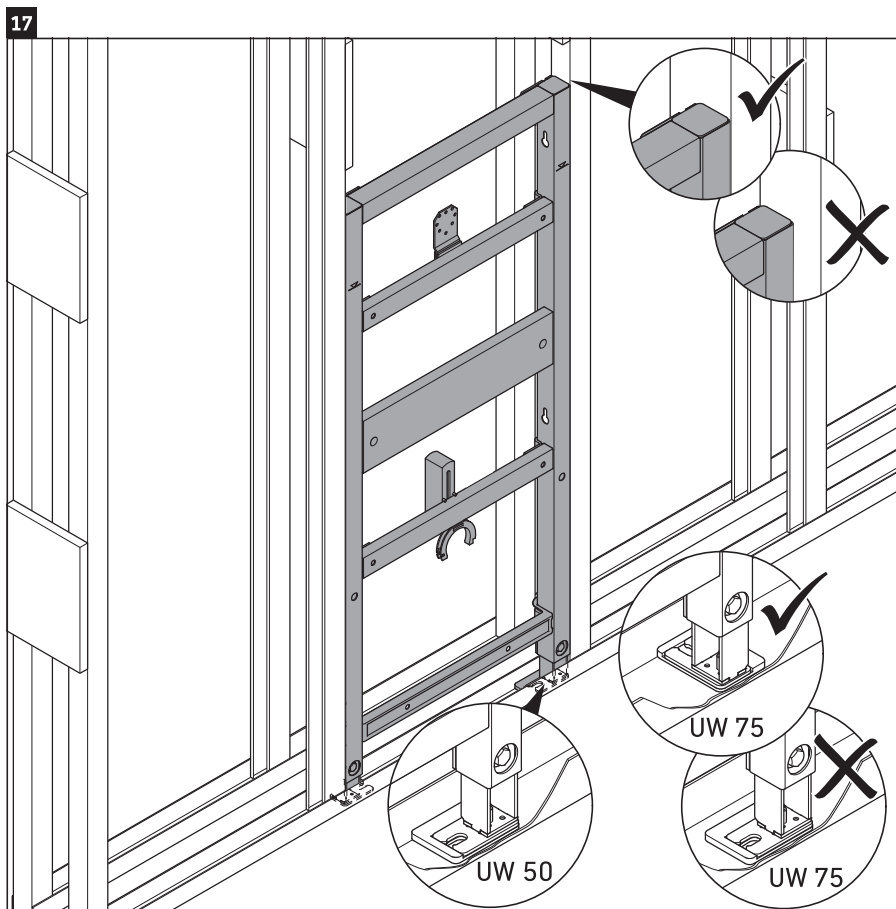





21 # WD6005 000 000

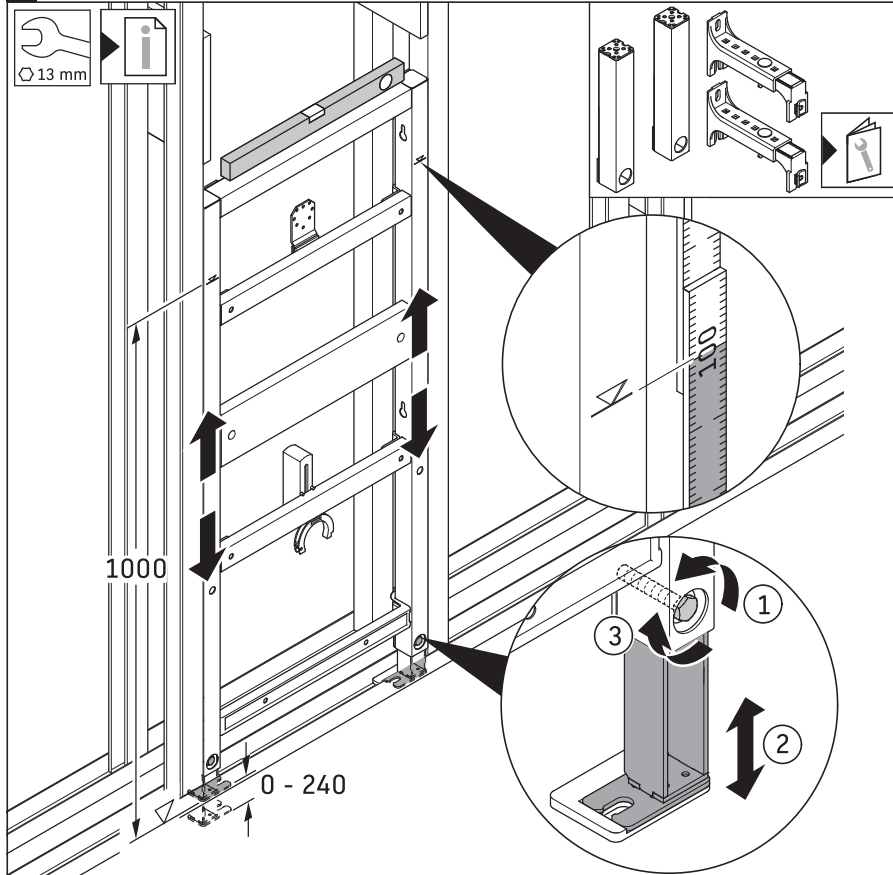


22

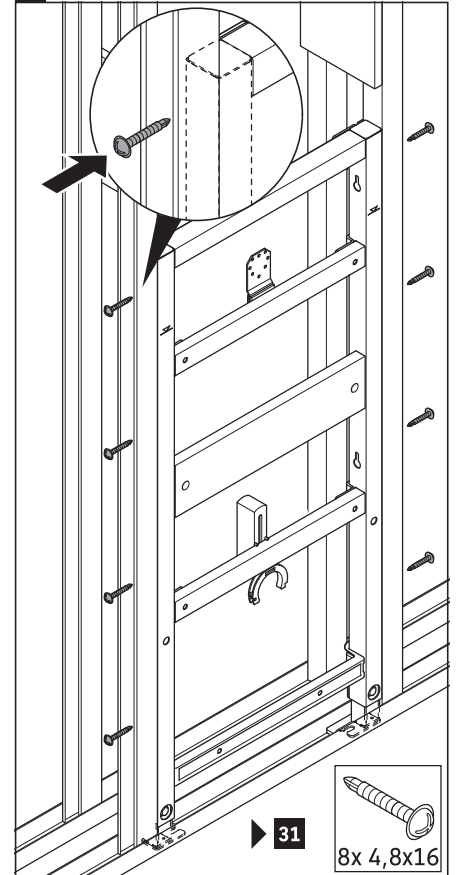


23

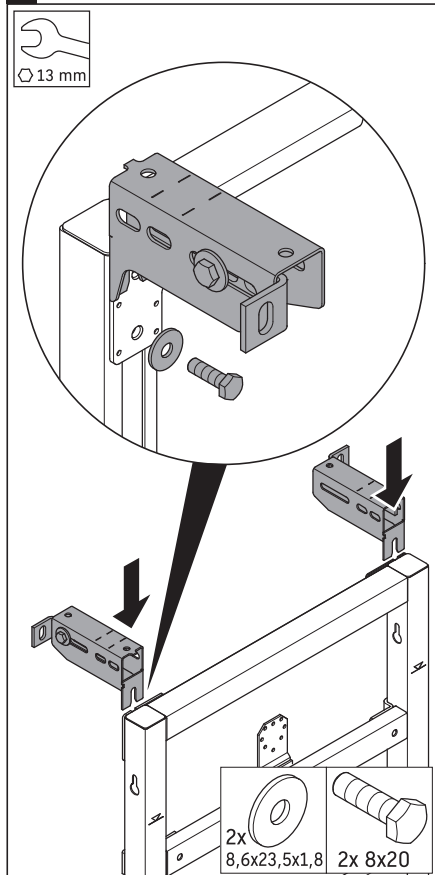

24

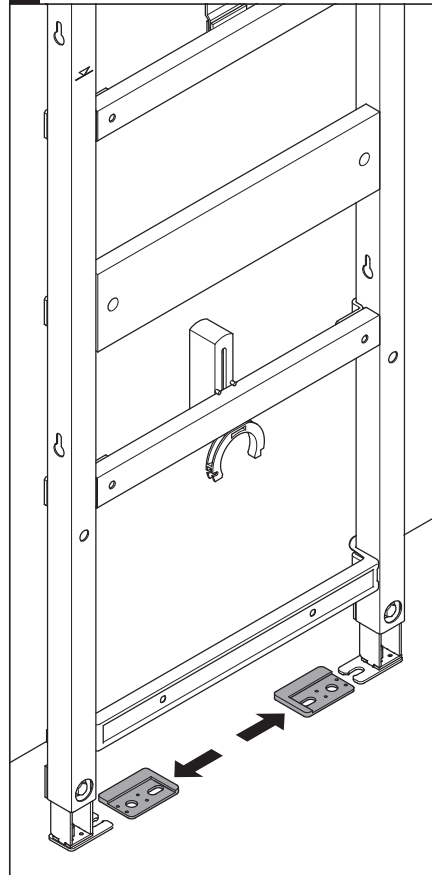


25 # WD6008 000 000

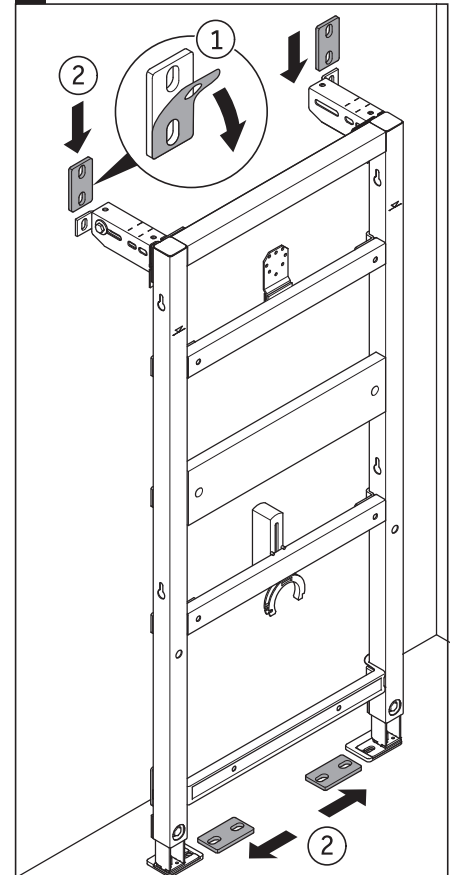





26 # WD6005 000 000

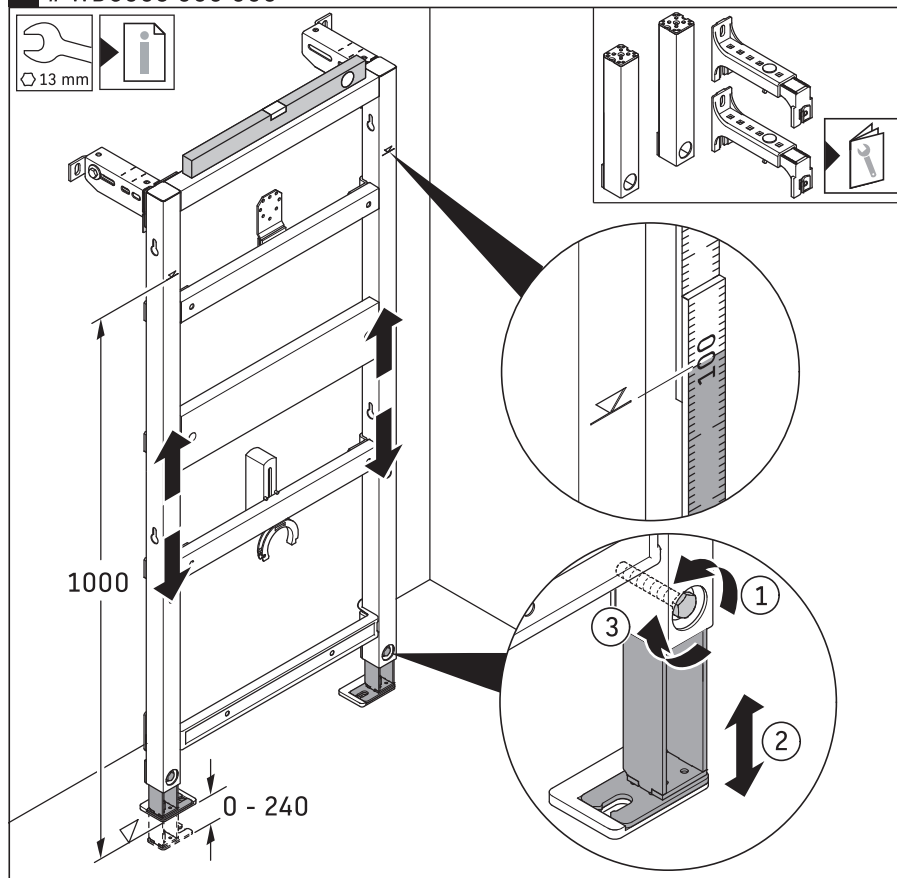


27

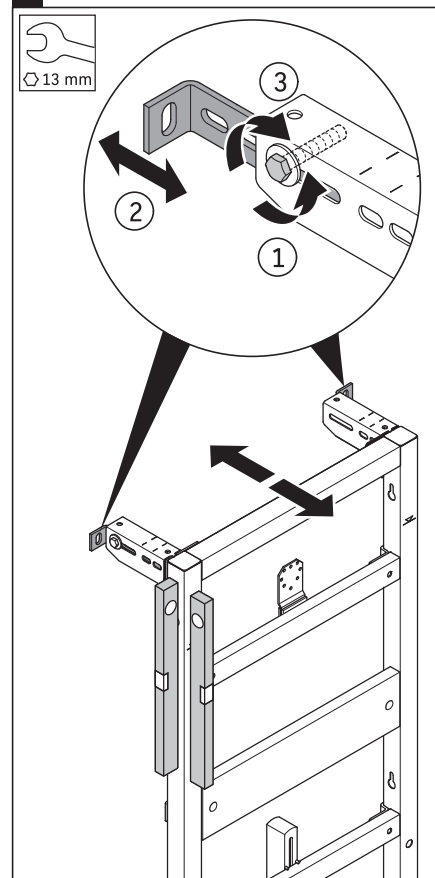


28







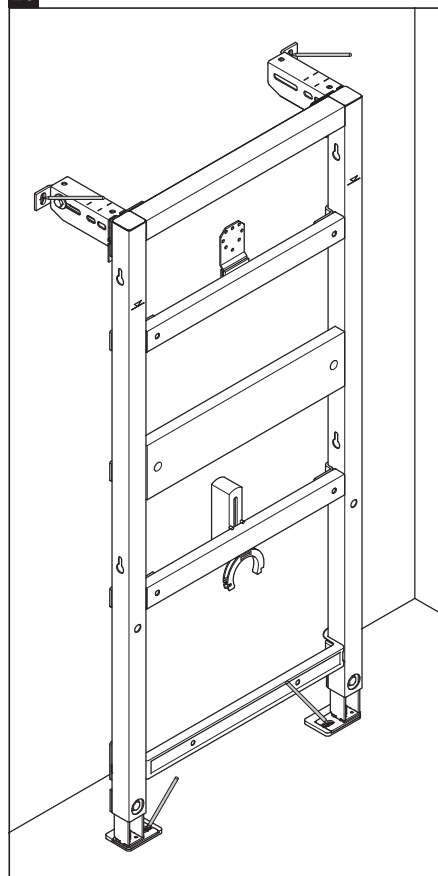


29

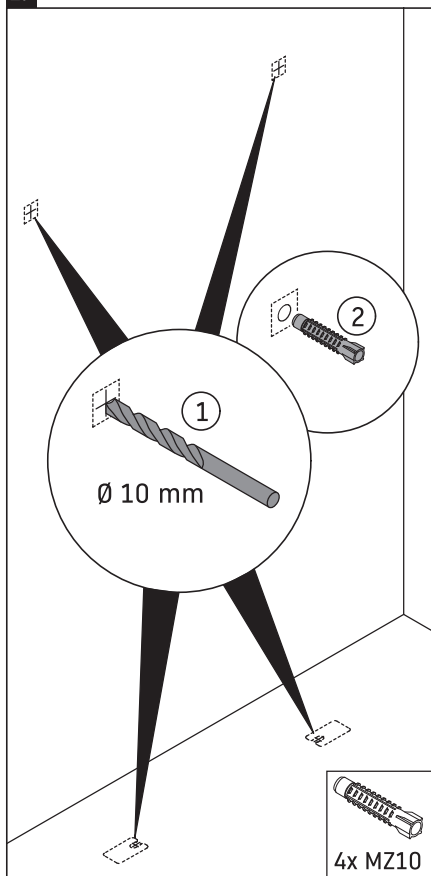


30

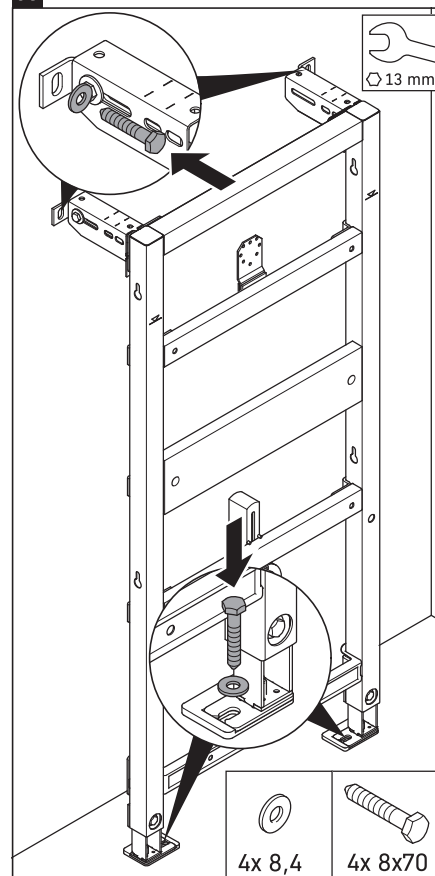

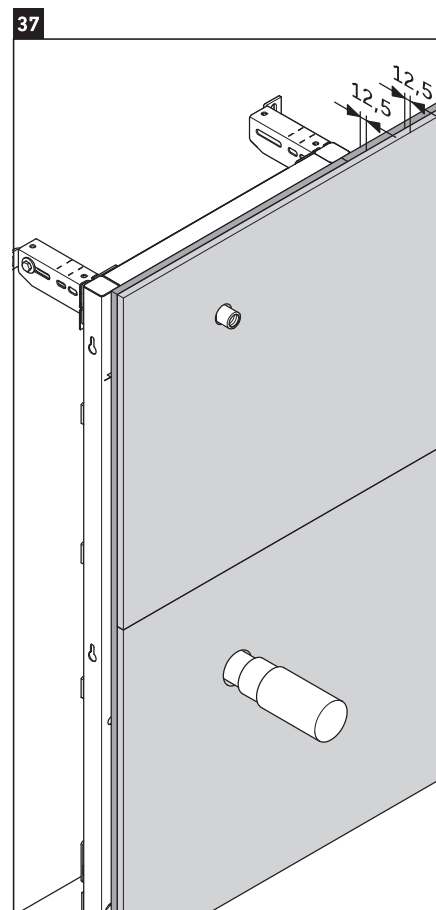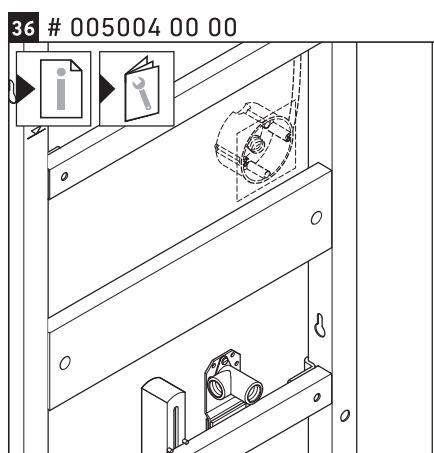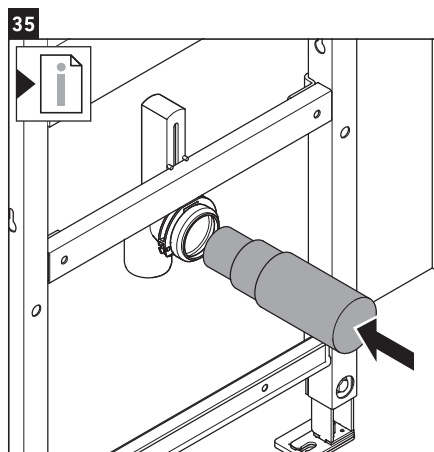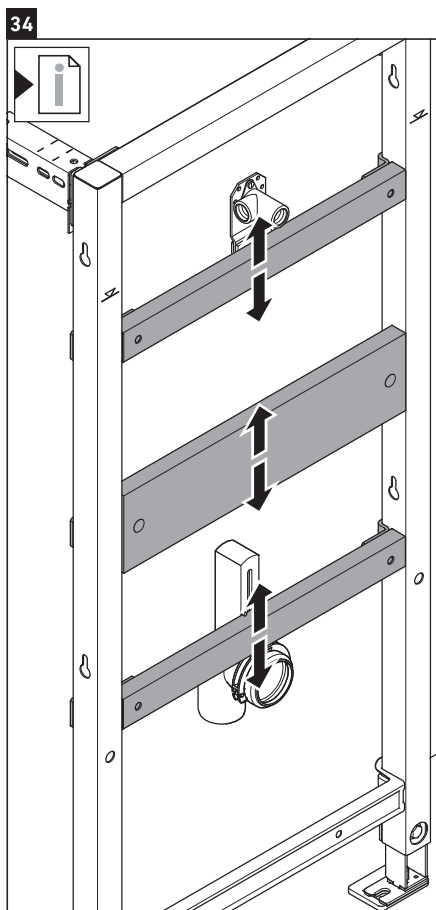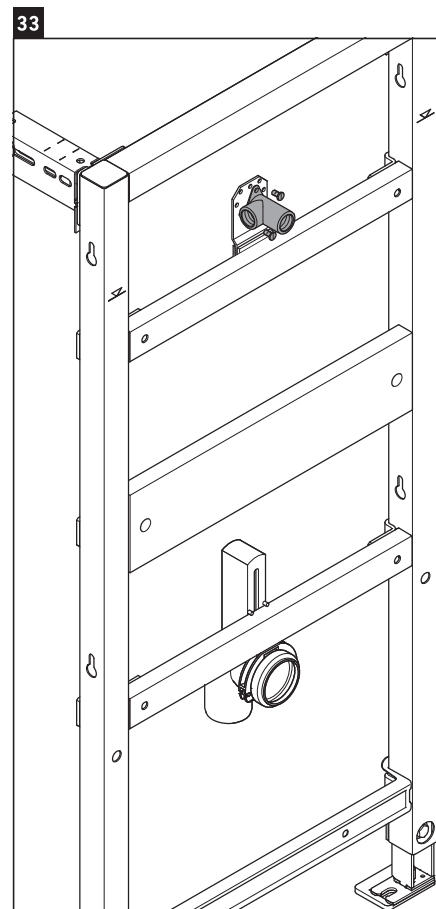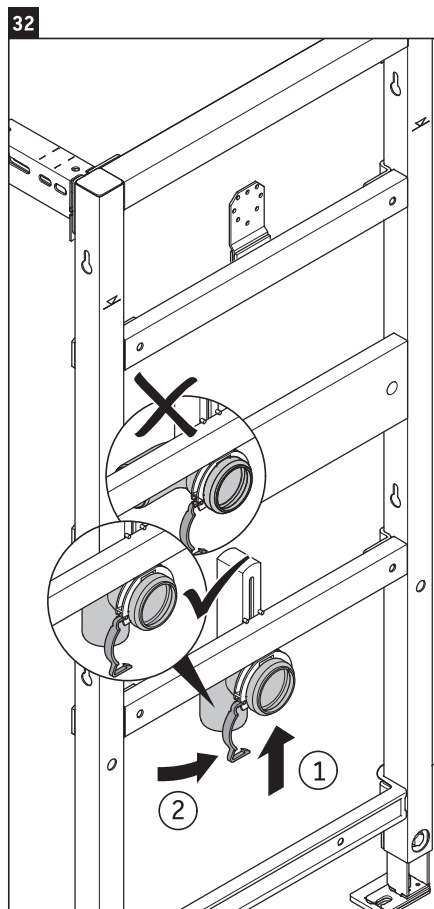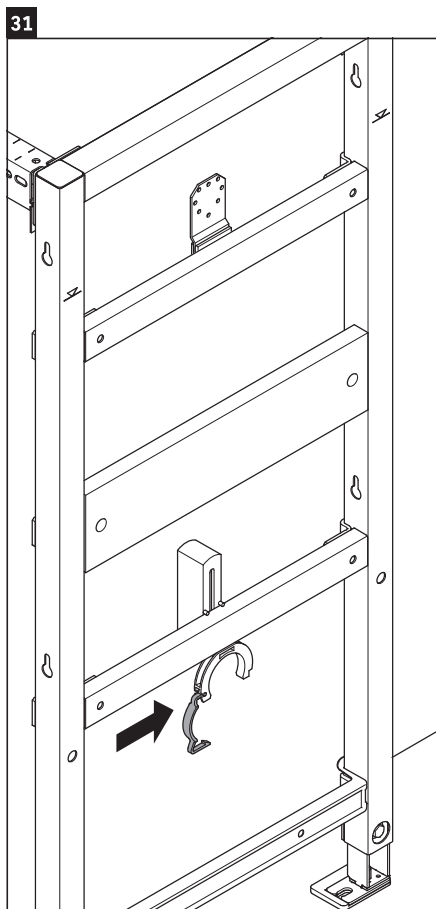



38

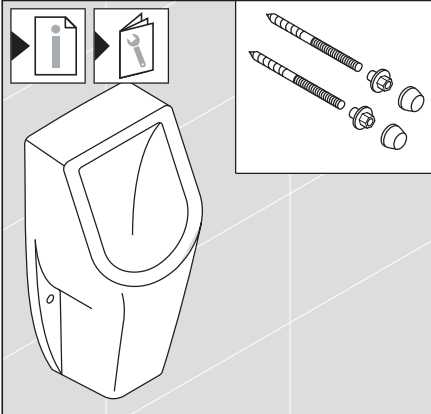

DURAVIT AG
P.O. Box 240
Werderstr. 36
78132 Hornberg
Germany
Phone +49 78 33 70 0
Fax +49 78 33 70 289
info@duravit.com
www.duravit.com

